


TA Filter Cartridge Housing Instruction Manual

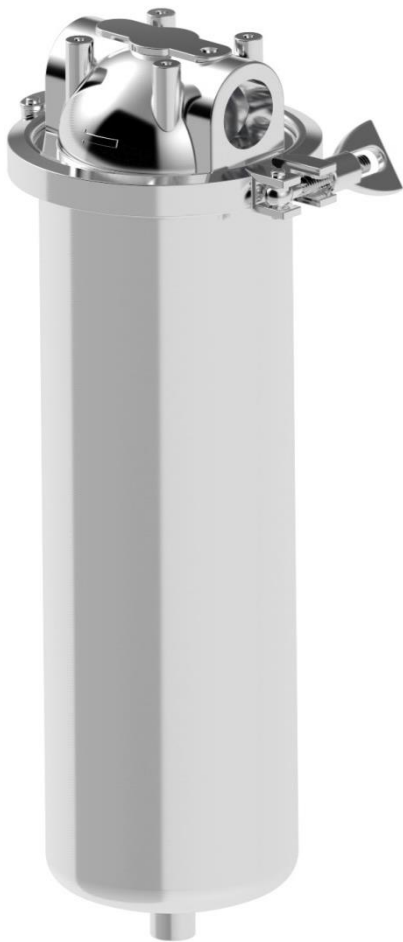

www.oztter.com

OZTTER CORPORATION

Contents

- ◎ Notice 2- 3
- ◎ Know Your Product 4
- ◎ Instruction Manual..... 5 - 6


Notice

1. Please install and test the housing according to the product instruction manual.
2. This product is designed for filter equipment used for water filtration only; please don't use it on other purpose to avoid danger.
3. This product is categorized as pressure vessel, only professional or well-trained person who can install and operate it.
4. Please read through the instruction manual before moving, installing and using this product.
5. Please check the product and make sure that there is no any damage or components lost before installing it. If the product was damaged, deformed or leaking, please stop using the housing
6. Please make sure that if the fluid is suitable for the filter before using.
7. Please use the product according to the instruction manual and make sure that the design pressure and the operating pressure are in the required range.
8. The filter housing must be installed and fixed on the level ground. Please do not fix it on the uneven ground.
9. Please do not open the top cover randomly before piping.
10. Installing the pressure control valve is suggested to keep the water pressure from the suddenly increased/decreased water pressure happens.

11. Please avoid rapid switching of ball valve and continuous countercurrent which may cause damage to filter and housing while using the product.
12. Be sure to relieve the pressure inside the filter housing completely before replacing filter cartridges.
Please be cautious with the possibility of fluid ejection when it is at a high temperature
13. Please use the suitable O-ring and check it regularly then replace it if necessary. Deterioration or damage of the O-ring may cause fluid leakage.
14. The internal plastics components will deteriorate by long-term use. Please check it regularly and replace it if deterioration or damage is found

Know Your Product

No.	名稱	Description	No.	名稱	Description	No.	名稱	Description
1	束環	Clamp	2	集水座	Cartridge supporter	3	O 型環	O-ring
4	桶體	Shell	5	濾心螺桿	Screw rod	6	濾心鎖螺	Nut
7	端板	Bottom cover	8	排放口	Drain			

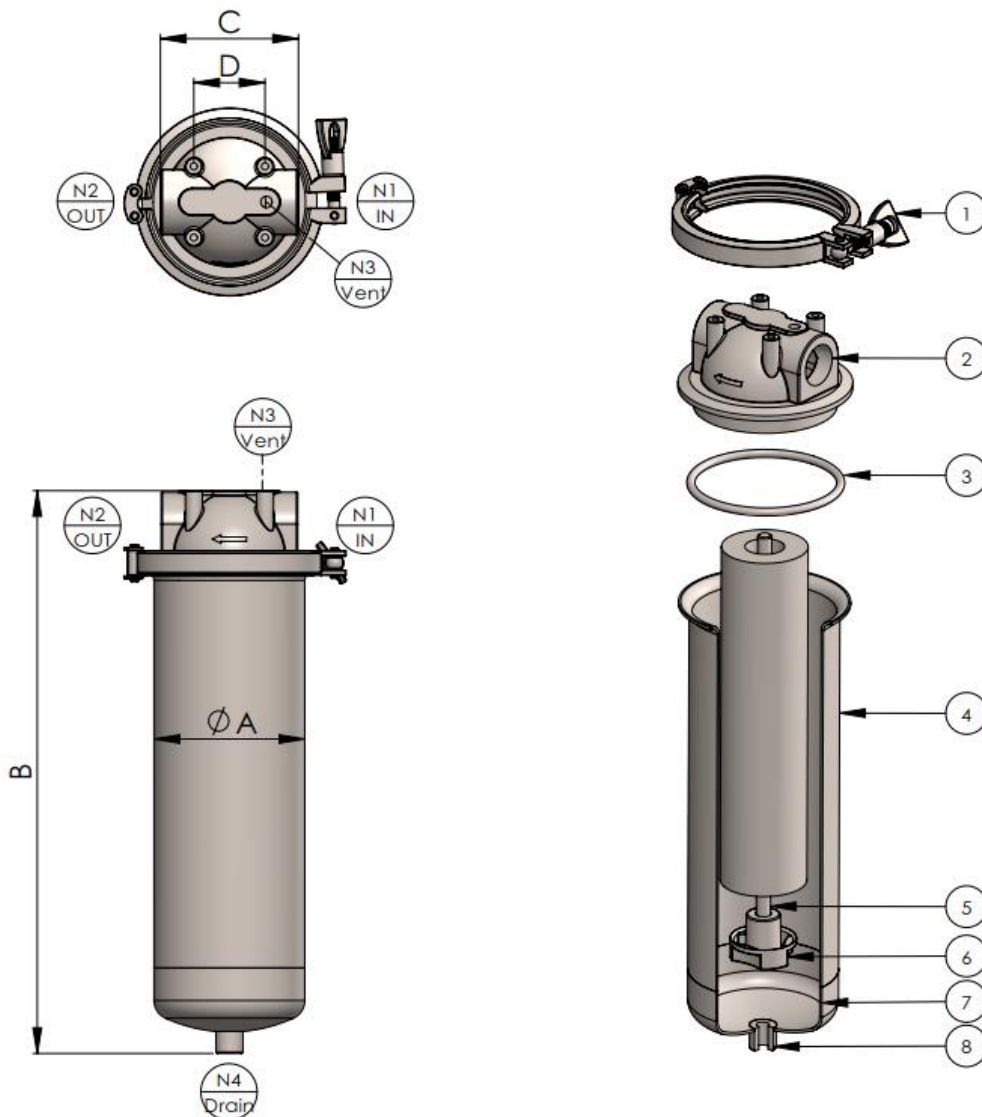

Instruction Manual

1. **Fix The Filter Housing :**

- a. Use the ②Cartridge supporter screw hole or lug to fix the housing on the machine.

2. **Pipe :**

- a. Connect the port inlet and outlet to the main pipe.
- b. Install the exhaust valve and pressure gauge at the vent.

3. **Open the Filter Housing and Install the Internal Parts :**

- a. Unfasten the ①Clamp in clockwise direction and take it out.
- b. Pull out ②Cartridge support plate and take it out.
- c. Unfasten the ⑥Nut (unfasten in counter-clockwise direction) and take it out.
- d. Align the center of the cartridge with ⑤Screw rod and insert it.

Align ⑥Nut with the center of cartridge hole and place on the top of cartridge. Fasten ⑥Nut in clockwise direction and the installation of the internal cartridge is done.

- e. Make sure the ③O-ring is in the groove.
- f. Put ②Cartridge supporter down in parallel and place it on the top of the O-ring. Open the ①Clamp, align it between shell flange and the top cover, and lock tightly.

4. **Testing :**

- a. Close ⑧Drain and open vent.

- b. Pour in water until water comes from vent, and then close the vent valve.
- c. Keep the above step for 30 minutes and checks whether there is leaking.

5. **Stop leaking** :

- a. If the leakage was found, please close inlet and unfasten vent to relieve the inner pressure.
- b. Unfasten the ①Clamp then lock it tightly again.
- c. Open inlet and increase pressure slowly and check if there is any leakage.
- d. If not, please open inlet and outlet to start working.

6. **Stop Running** :

- a. Please close inlet and outlet first.
- b. Stop running water and open vent to relieve inner pressure slowly.
- c. Make sure inner pressure is relieved completely before opening.