

TRQ Filter Cartridge Housing Instruction Manual



www.oztter.com

OZTTER CORPORATION

Contents

◎ Notice	2 - 3
◎ Know Your Product	4
◎ Instruction Manual	5 - 6


Notice

1. Please install and test the housing according to the product instruction manual.
2. This product is designed for filter equipment used for water filtration only; please don't use it on other purpose to avoid danger.
3. This product is categorized as pressure vessel, only professional or well-trained person who can install and operate it.
4. Please read through the instruction manual before moving, installing and using this product.
5. Please check the product and make sure that there is no any damage or components lost before installing it. If the product was damaged, deformed or leaking, please stop using the housing.
6. Please make sure that if the fluid is suitable for the filter before using.
7. Please use the product according to the instruction manual and make sure that the design pressure and the operating pressure are in the required range.
8. The filter housing must be installed and fixed on the level ground. Please do not fix it on the uneven ground.
9. Please do not open the top cover randomly before piping.
10. Installing the pressure control valve is suggested to keep the water pressure from the suddenly increased/decreased water pressure happens.

11. Please avoid rapid switching of the ball valve and continuous countercurrent which may cause damage to filter and housing while using the product.
12. Be sure to relieve the pressure inside the filter housing completely before replacing filter cartridges.
Please be cautious with the possibility of fluid ejection when it is at a high temperature.
13. Please use the suitable O-ring and check it regularly then replace it if necessary. Deterioration or damage of the O-ring may cause fluid leakage.
14. The internal plastics components will deteriorate by long-term use. Please check it regularly and replace it if deterioration or damage is found.

Know Your Product

No.	名稱	Description	No.	名稱	Description	No.	名稱	Description
1.	上蓋	Top cover	2.	上蓋唇	Top cover flange	3.	排氣口	Vent
4.	掀蓋組	Raise cover unit	5.	O 型環	O-ring	6.	束環	Clamp
7.	桶唇	Shell flange	8.	壓板螺母	Nut	9.	彈簧組	Springs
10.	壓板	Pressure plate	11.	濾心角條	Cartridge post	12.	桶體	Shell
13.	轉盤	Turntable	14.	雙頭牙條	Threaded rod	15.	杯座	Pedestal
16.	集水板螺母	Nut	17.	集水板	Cartridge support plate	18.	排放口	Drain
19.	出口	Outlet	20.	端板	Bottom cover	21.	腳架	Support leg

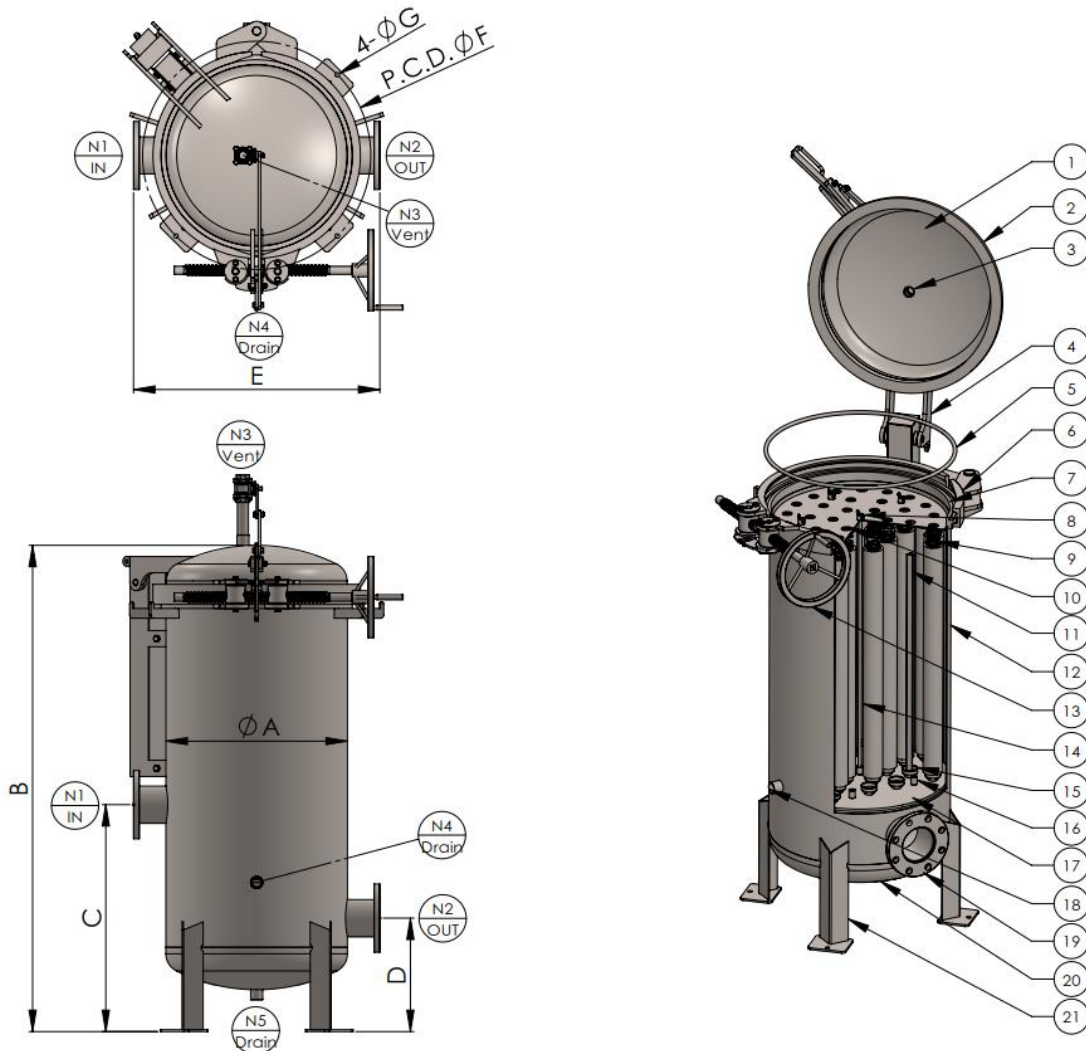

Instruction manual

1. Fix the filter housing :

- a. Adjust ⑫ support leg and put the filter housing into the proper position, then fix it on the ground or board.

2. Pipe :

- a. Connect ⑫ Inlet and ⑬ Outlet to the main pipe.
- b. Install the exhaust valve and pressure gauge at ④ Vent.

3. Open the filter housing and install the internal parts :

- a. To push up the handle then loosen the ⑥ Clamp. Turn the ⑬ Turntable in anticlockwise direction until the ① Top cover removed from the ⑥ Clamp and open it. Take out the safety latch, which is attached on the ④ Raises cover unit, to fix the ① Top cover.
- b. After fixed the ① Top cover, please unfasten the ⑧ Nut, and take out ⑩ Pressure plate, ⑨ Springs.
- c. Align the center of the filter cartridge with the ⑪ Cartridge post and insert it. ⑨ Springs aim to the center of cartridge hole and place on the top of the cartridge (Spring cover downward)
- d. The holes of ⑩ Pressure plate aim to the ⑭ Threaded rod and put it down in parallel. Please check if ⑨ Springs aimed to the leading hole.
- e. Fasten ⑧ Nut in clockwise direction and the installation of the internal cartridge is done.
- f. Please make sure ⑤ O-ring is in the groove.

- g. Take the safety latch back to the original place. Put down the ① Top cover on the top of ⑤ O-ring closely. Align the ⑥ Clamp with the ⑦ Shell flange and use the ⑬ Turntable to fasten tightly in clockwise direction.

4. Testing :

- a. Close ⑱ Drain, open ③ Vent.
- b. Pour in water until water comes out from ③ Vent, and then close the vent valve.
- c. Keep the above step for 30 minutes and checks whether there is leaking.

5. Stop leakage :

- a. If the leakage was found, please close ⑲ Inlet and unfasten ③ Vent to relieve the inner pressure.
Unfasten the ④ Raises cover unit and clamp the ① Top cover tightly again.
- b. Open ⑲ Inlet and increase pressure slowly and check if there is any leakage.
- c. If not, please open ⑲ Inlet and ⑲ Outlet to start working.

6. Stop running :

- a. Please close ⑲ Inlet and ⑲ Outlet first.
- b. Stop running water and open ③ Vent.
- c. Please open the filter housing after relieving the inner pressure.