

# KM(SI&SO) Filter Bag Housing Instruction Manual



[www.oztter.com](http://www.oztter.com)

**OZTTER CORPORATION**

## Contents

◎ Notice.....	2 - 3
◎ Know Your Product.....	4
◎ Instruction Manual.....	5 - 6


## Notice

1. Please install and test the housing according to the product instruction manual.
2. This product is designed for filter equipment used for water filtration only; please don't use it on other purpose to avoid danger.
3. This product is categorized as pressure vessel, only professional or well-trained person who can install and operate it.
4. Please read through the instruction manual before moving, installing and using this product.
5. Please check the product and make sure that there is no any damage or components lost before installing it. If the product was damaged, deformed or leaking, please stop using the housing.
6. Please make sure that if the fluid is suitable for the filter before using.
7. Please use the product according to the instruction manual and make sure that the design pressure and the operating pressure are in the required range.
8. The filter housing must be installed and fixed on the level ground. Please do not fix it on the uneven ground.
9. Please do not open the top cover randomly before piping.
10. Installing the pressure control valve is suggested to keep the water pressure from the suddenly increased/decreased water pressure happens.

11. Please avoid rapid switching of the ball valve and continuous countercurrent which may cause damage to filter and housing while using the product.
12. Be sure to relieve the pressure inside the filter housing completely before replacing filter cartridges.  
Please be cautious with the possibility of fluid ejection when it is at a high temperature.
13. Please use the suitable O-ring and check it regularly then replace it if necessary. Deterioration or damage of the O-ring may cause fluid leakage.
14. The internal plastics components will deteriorate by long-term use. Please check it regularly and replace it if deterioration or damage is found.

# Know Your Product

No.	名稱	Description	No.	名稱	Description	No.	名稱	Description
1.	轉盤	Turntable	2.	螺桿	Screw rod	3.	吊架	Davit
4.	排氣口	Vent	5.	上蓋	Top cover	6.	上蓋唇	Top cover flange
7.	環首螺母座	Eye nut socket	8.	O 型環	O-ring	9.	桶唇	Shell flange
10.	單眼螺絲座	Eye bolt socket	11.	出入口	Inlet/Outlet	12.	單眼螺絲組	Eye bolt
13.	濾袋座	Filter bag plate	14.	金屬內網	Basket	15.	桶體	Shell
16.	端板	Bottom cover	17.	排放口	Drain	18.	腳架	Support leg

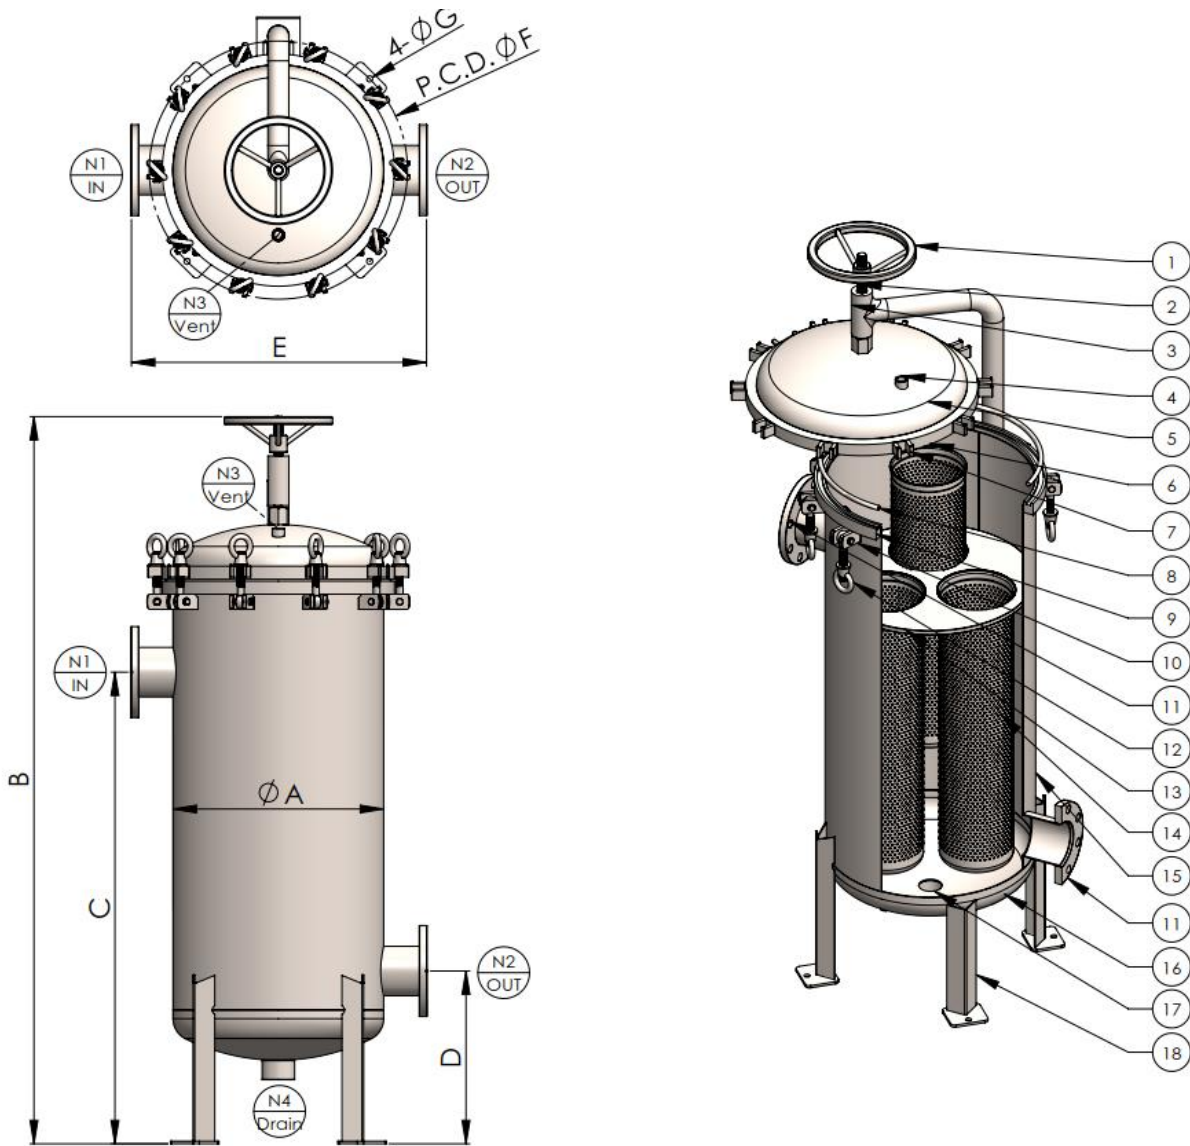

# Instruction Manual

## 1. Fix the filter housing :

- a. Adjust ⑱Support leg and put the filter housing into the proper position, then fix it on the ground or board.

## 2. Pipe :

- a. Connect ⑪Inlet and Outlet to the main pipe.
- b. Install the exhaust valve and pressure gauge at ④Vent

## 3. Open the filter housing and install the internal parts :

- a. Loosen the ⑫Eye bolt. Turn ①Turntable in anticlockwise direction and open the ⑤Top cover.  
Make sure the ⑤Top cover was removed right/left carefully more than 10cm from the ⑮Shell.
- b. Put the filter bag in and clip top ring with ⑬Filter bag plate closely and make sure ⑭Basket, Filter bag, ⑧O-ring are installed in proper position.
- c. Turn the ⑤Top cover to the top of ⑧O-ring and use ①Turntable to close the ⑤Top cover tightly.
- d. Align the center of the U-shape with eye bolt socket and fasten ⑫Eye bolt tightly.

## 4. Testing :

- a. Close ④Vent and pour in water until water comes out from ④Vent.
- b. Close the exhaust valve at ④Vent when water comes out from ④Vent. Then increase pressure to operating pressure slowly.

c. Keep the above step for 30 minutes and checks whether there is leaking.

## 5. Stop leakage :

- a. If the leakage was found, please close ⑪Inlet and unfasten ④Vent to relieve the inner pressure.
- b. Fasten the ⑫Eye bolt tightly again.
- c. Then open ⑪Inlet and increase pressure slowly and check if there is any leakage.
- d. If not, please open ⑪Inlet and Outlet to start working.

## 6. Stop running :

- a. Please close ⑪Inlet and Outlet first.
- b. Stop running water and open ④Vent.
- c. Please open the filter housing after relieving the inner pressure.